

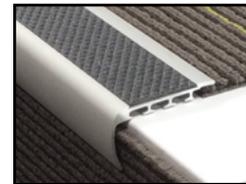


SAFETY STAIR NOSING FOR CARPET


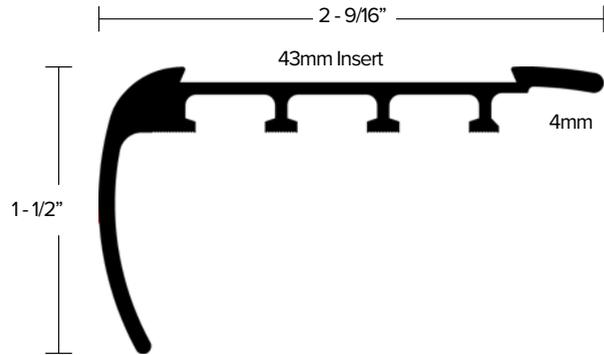


AA121 1 1/2" Bullnose
BULLNOSE SAFETY STAIR WITH PRE-DRILLED AND COUNTER-SUNK HOLES FOR #4 SCREW 82°
INSERT WIDTH: **43MM**
FINISH: EA

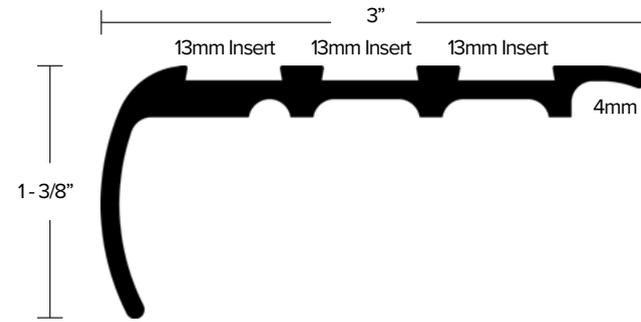

AA345 1 3/8" Bullnose
BULLNOSE SAFETY STAIR WITH PRE-DRILLED AND COUNTER-SUNK HOLES FOR #4 SCREW 82°
INSERT WIDTH: **13MM X 3**
FINISH: EA



SAFETY STAIR NOSING FOR BARE FLOOR

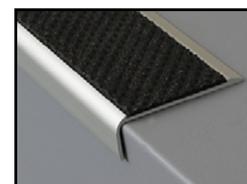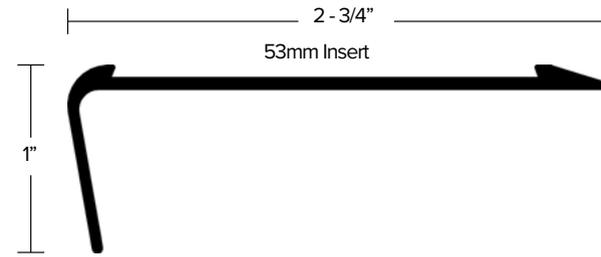



AA125 1" Rake-Back
SAFETY STAIR WITH PRE-DRILLED AND COUNTER-SUNK HOLES FOR #4 SCREW 82°
INSERT WIDTH: **53MM**
FINISH: EA

SAFETY STAIR NOSING FEATURING TREDSAFE® INSERTS

 **FUTURA**
TRANSITIONS
by **Bonnell Aluminum**

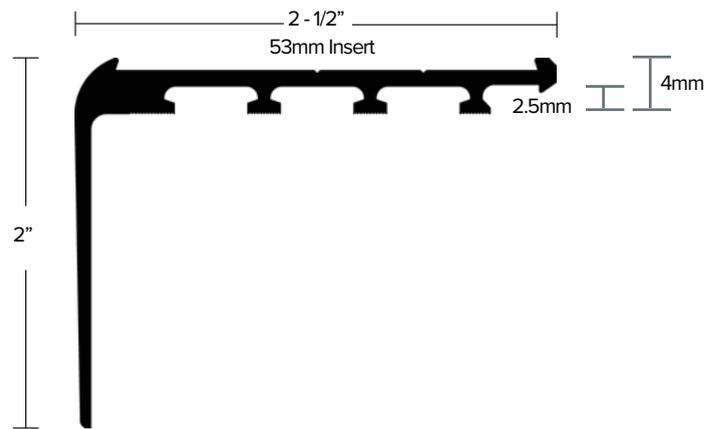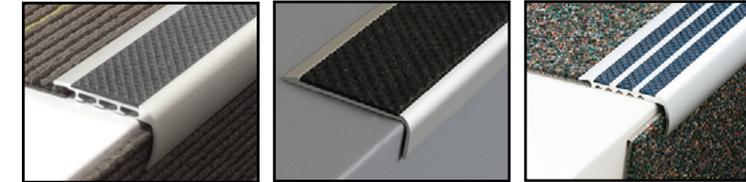


AA123 2" Right Angle Drop
SAFETY STAIR WITH PRE-DRILLED AND COUNTER-SUNK HOLES FOR #4 SCREW 82°
INSERT WIDTH: **53MM**
FINISH: EA

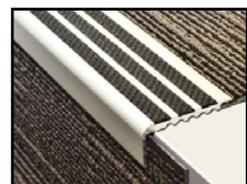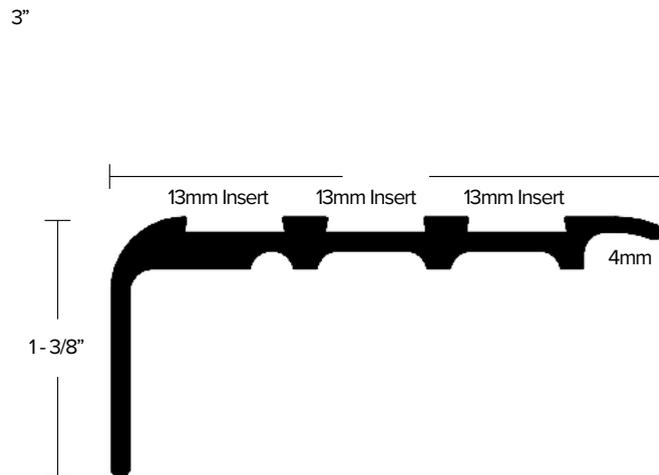

AA346 1 3/8" Right Angle Drop
SAFETY STAIR WITH PRE-DRILLED AND COUNTER-SUNK HOLES FOR #4 SCREW 82°
INSERT WIDTH: **13MM X 3**
FINISH: EA

SAFETY STAIR NOSING FOR CERAMIC FLOOR

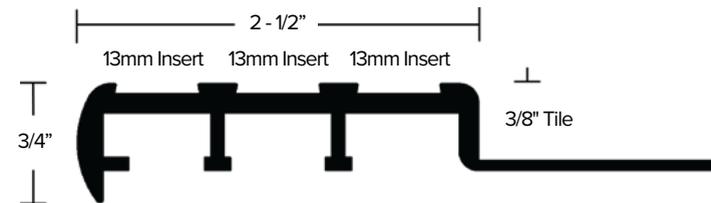

AA351 Ceramic Stair Nose
SAFETY STAIR WITH PRE-DRILLED AND COUNTER-SUNK HOLES FOR #4 SCREW 82°
INSERT WIDTH: **13MM X 3**
FINISH: EA

982179/02/22

www.futuratransitions.com
1.800.824.2049



TREDSAFE® INSERTS

Tredsafe insert is manufactured from a special blend of PVC, silica quartz and polymeric plasticiser giving an homogeneous hard wearing anti-slip flooring for wet and dry conditions. Tredsafe insert is resistant to attack from ultraviolet light, oil, grease, gasoline, salt, dilute acids and alkalis, common household chemicals and detergents. Organic solvents will soften Tredsafe insert. Suitable for interior or exterior use.



NEUTRAL BLACK

SIZES: 13MM, 43MM AND 53MM.




SAFETY ORANGE

SIZES: 13MM, 43MM AND 53MM.



SIGNAL YELLOW

SIZES: 13MM, 43MM AND 53MM.



MID GREY

SIZES: 13MM, 43MM AND 53MM.

SPECIAL ORDER ONLY



RICH BROWN

SIZES: 13MM, 43MM AND 53MM.

SPECIAL ORDER ONLY



CHARCOAL GREY

SIZES: 13MM, 43MM AND 53MM.

SPECIAL ORDER ONLY

SPECIAL ORDER TREDSAFE INSERTS



SAFETY WHITE

SIZES: 13MM, 43MM AND 53MM.


SPECIAL ORDER ONLY



SAFETY BLUE

SIZES: 13MM, 43MM AND 53MM.

SPECIAL ORDER ONLY



SAFETY GREEN

SIZES: 13MM, 43MM AND 53MM.

SPECIAL ORDER ONLY



SAFETY RED

SIZES: 13MM, 43MM AND 53MM.

SPECIAL ORDER ONLY



LIGHT GREY

SIZES: 13MM, 43MM AND 53MM.


SPECIAL ORDER ONLY



LUMITRED


SIZES: 13MM, 43MM AND 53MM.

SPECIAL ORDER ONLY

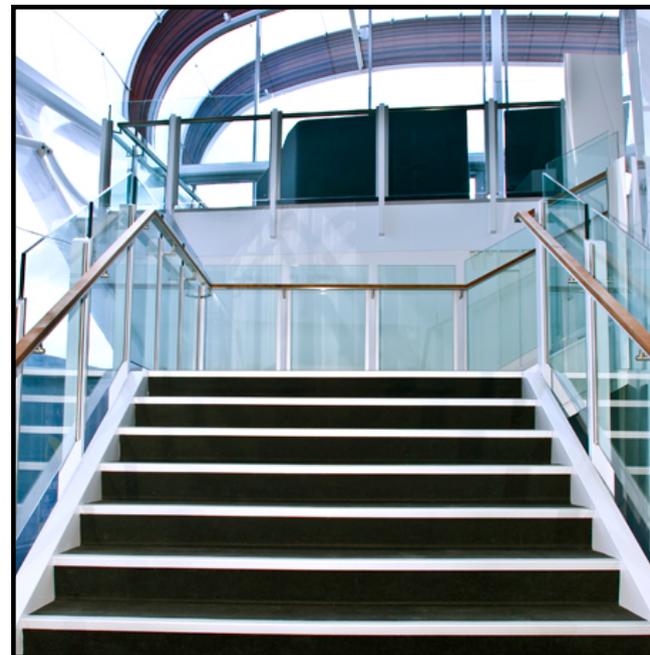


INSTALLATION OF TREDSAFE INSERTS

Step 1

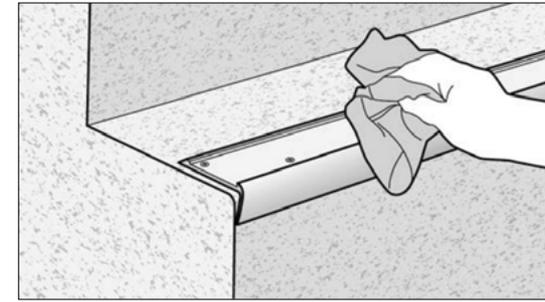


Ensure the aluminum channel is clean from dust, residues and debris. Wipe down with a cleaning solvent (Isopropyl Alcohol or similar).

Step 2

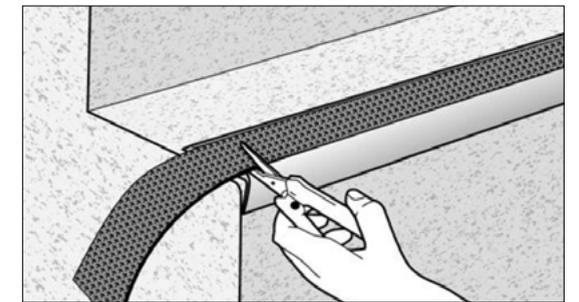


Precut the Insert to your required length.

Step 3

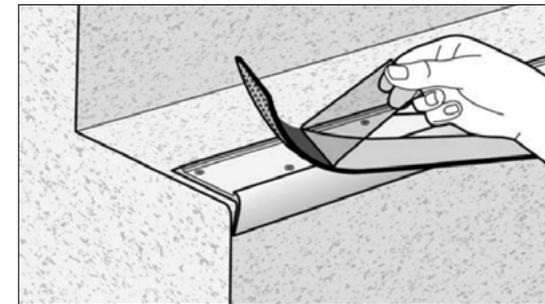


Remove the adhesive backing liner from the Tredsafe® Insert.

Step 4

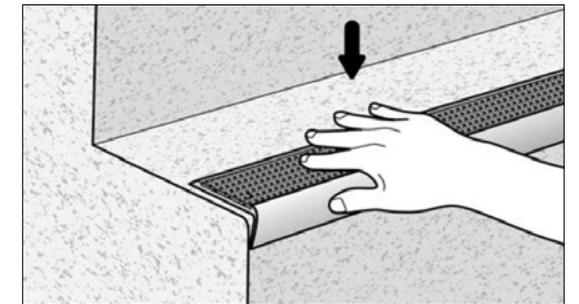


Install by placing the Insert into the nosing and pressing into place without undue stretching.

Step 5

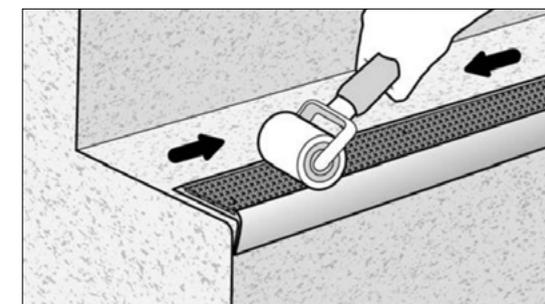

Once in place, roll over the Insert to ensure consistent adhesion and a secure bond. Please take care not to stretch the Insert when rolling. Installation is now complete.

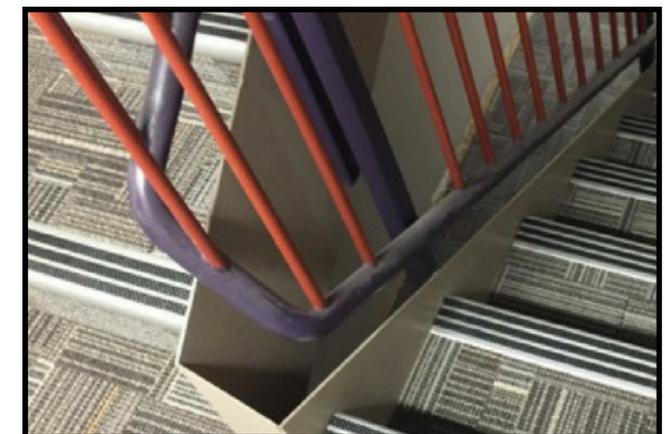

ADA Compliance

Many of the trims and transitions offered by Futura Transitions are compatible with ADA 2010 Standards section 303 Changes in Level and section 504.5 Nosings. However, installers and contractors must ensure that the finished installation, including any Futura Transitions product complies with current ADA standards when the project specifies an ADA requirement. [For more information on ADA standards visit https://www.ada.gov/2010ADASTandards_index.htm](https://www.ada.gov/2010ADASTandards_index.htm)